

Adding a License to a Thinknx Server

- **Step 1** Copy the license code received upon your purchase.



Step 1: License code

- **Step 2** Log in to your server by inputting ip_address:5051 into your web browser.




Step 2: Server Webpage

- **Step 3** Enter your login credentials (default username: service, default password: password).




Step 3: Server Login

- **Step 4** Go to Server -> Licenses and Codes.

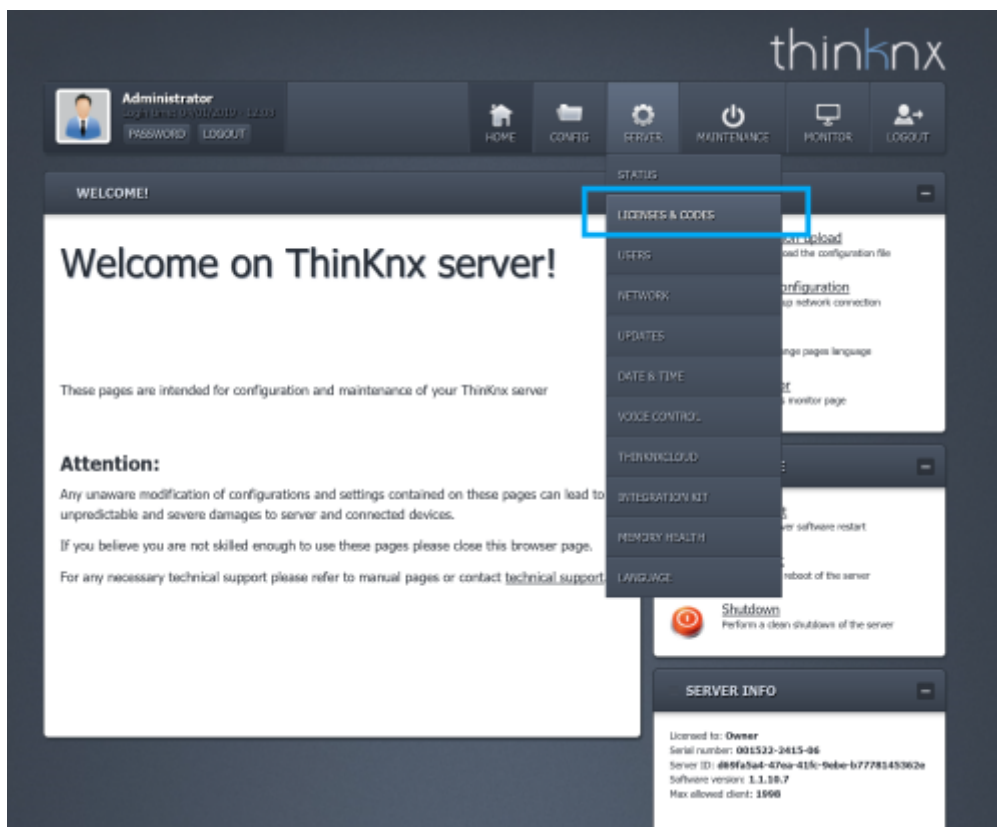


Step 4: Licenses and Codes

- **Step 5** Paste the copied license in the text field under “Licenses”.

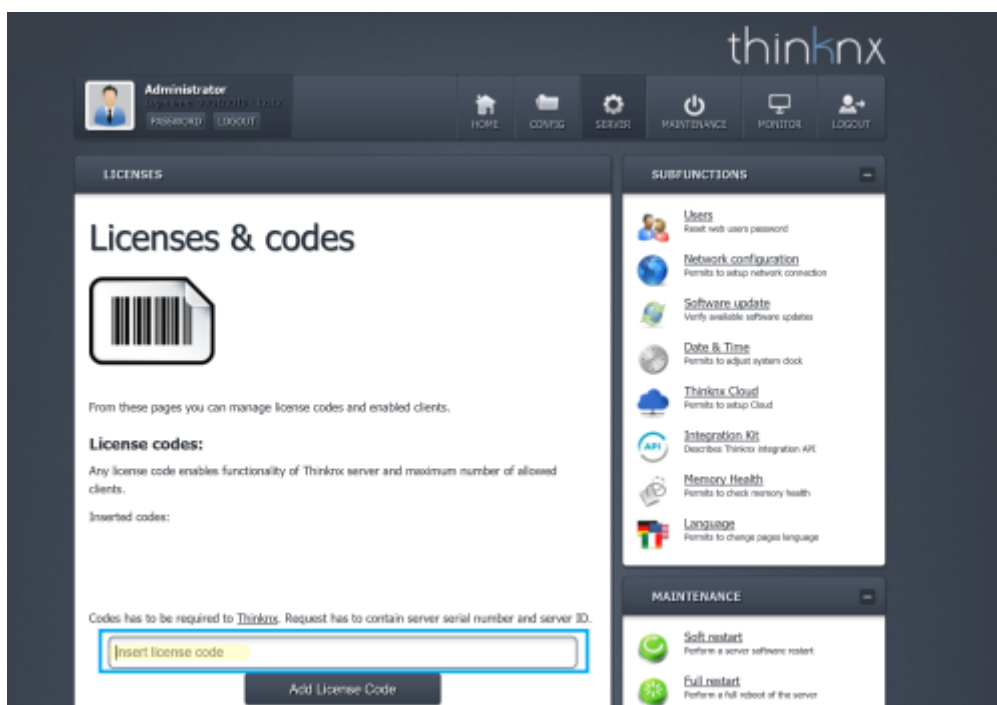


Step 5: Pasting the Code

- **Step 6** Click on Add License button.

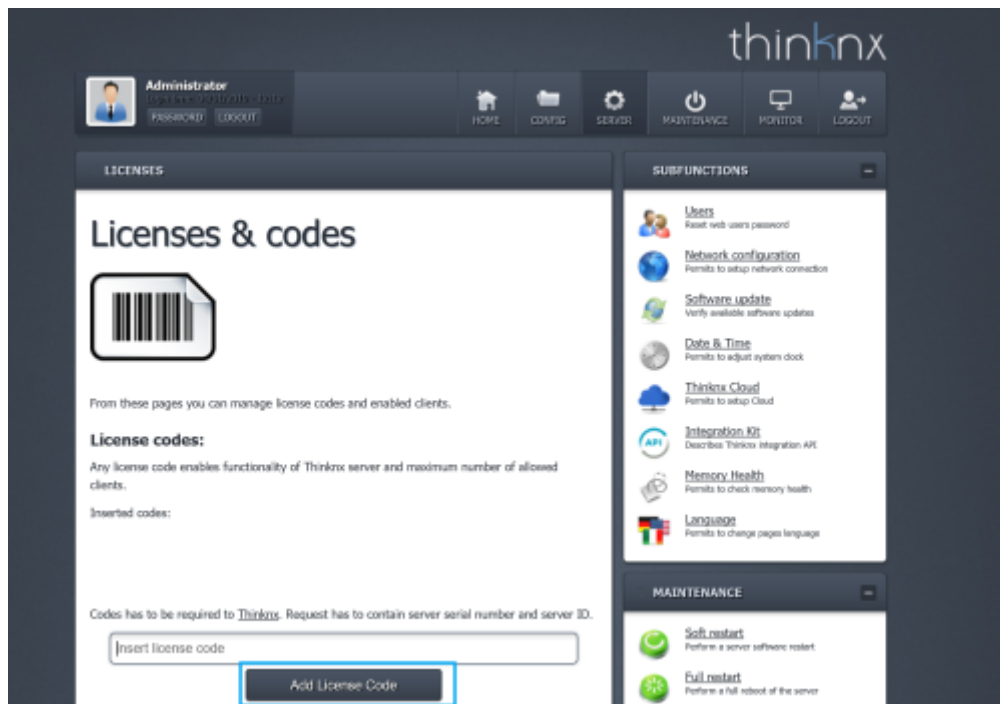

Step 6: Adding the Code

- **Step 7** To make sure the license is activated, go to Server -> Status.

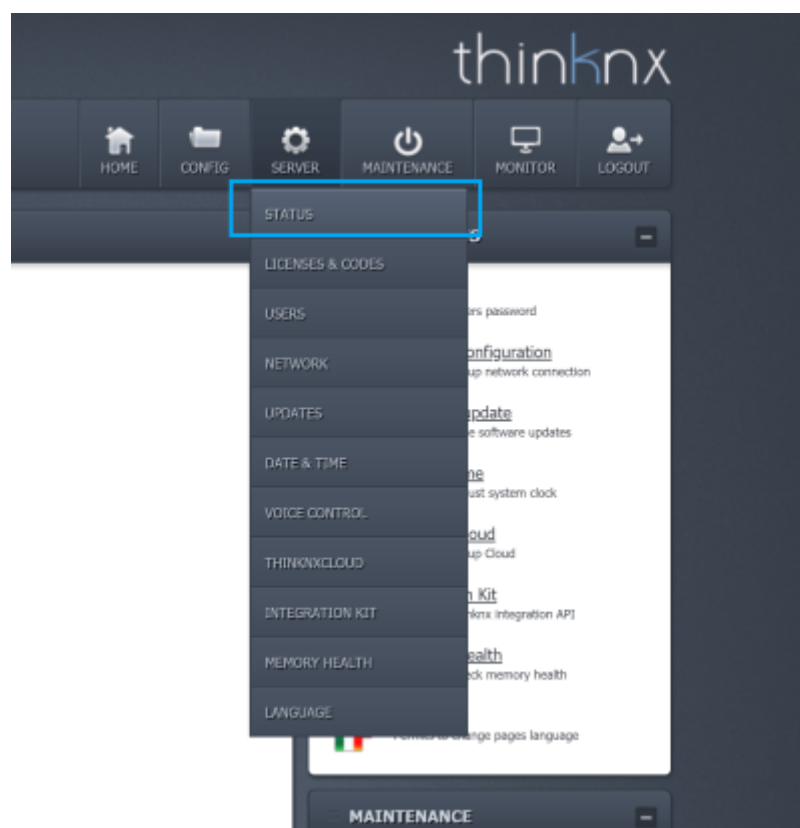

Step 6: Status Page

- **Step 8** Check under “Enabled Licenses” if your newly added license is now activated.

- Enabled licenses:

KNX
Security appliances
Intercom
Modbus Gateway
Reports & Charts Engine
Infrared Gateway
Automation
Multimedia
Sonos Manager
Serial Gateway
Ethernet Gateway
Lutron Gateway
Sip PBX
Hue Gateway
BTicino MYHome Gateway
Z-Wave Gateway
Voice Control
Integration Kit API

Step 7: Enabled Licenses

From:

<http://www.thinknx.com/wiki/> - **Learning Thinknx**

Permanent link:

<http://www.thinknx.com/wiki/doku.php?id=licensing&rev=1554118552>

Last update: **2019/04/01 13:35**

