 



Adding a License to a Thinknx Server

- **Step 1** Copy the license code received upon your purchase.



Step 1: License code

 - **Step 2** Log in to your server by inputting ip_address:5051 into your web browser.




Step 2: Server Webpage

- **Step 3** Enter your login credentials (default username: service, default password: password).




Step 3: Server Login

- **Step 4** Go to Server -> Licenses and Codes.

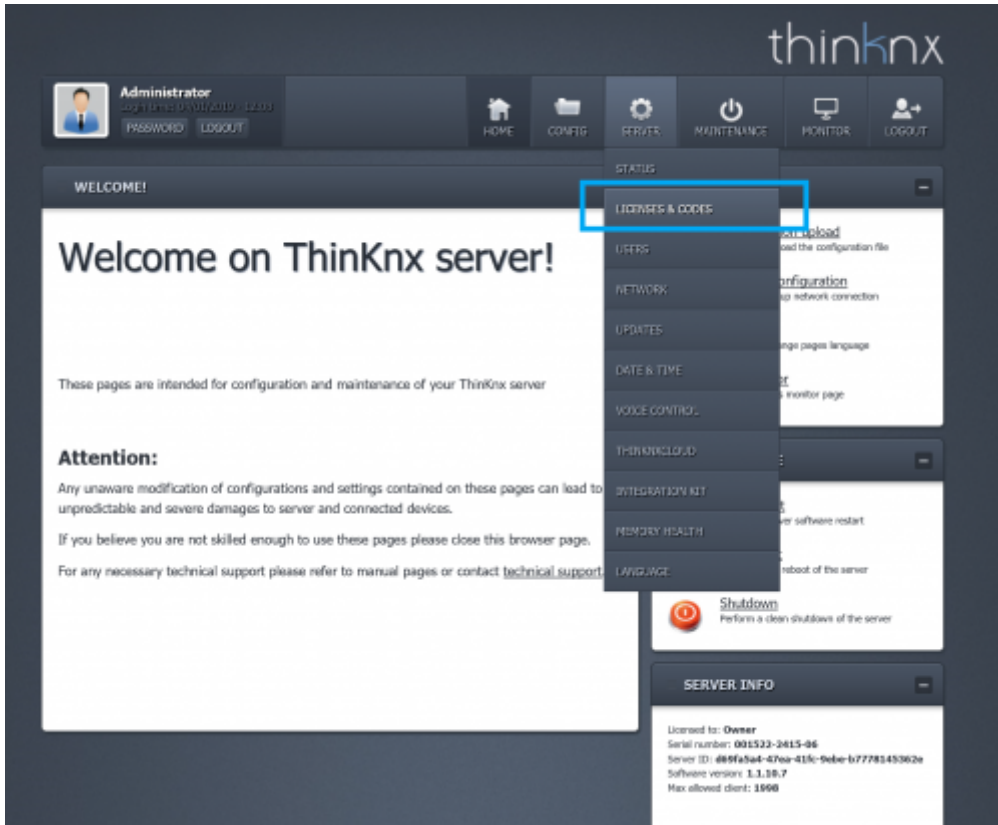


Step 4: Licenses and Codes

- **Step 5** Paste the copied license in the text field under “Licenses”.

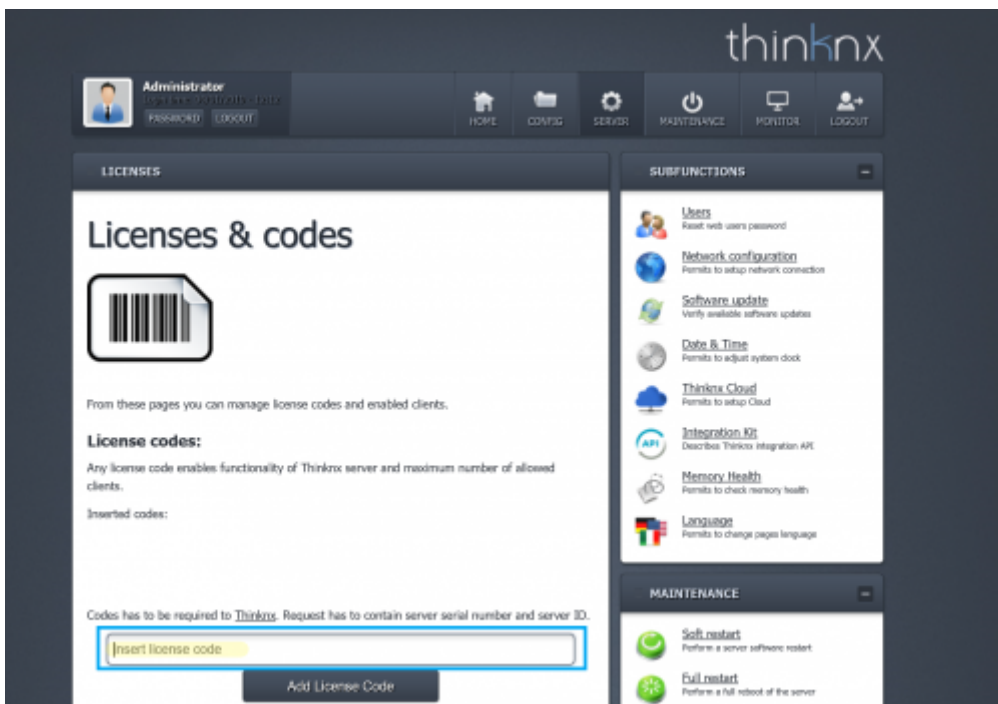


Step 5: Pasting the Code

- **Step 6** Click on Add License button.

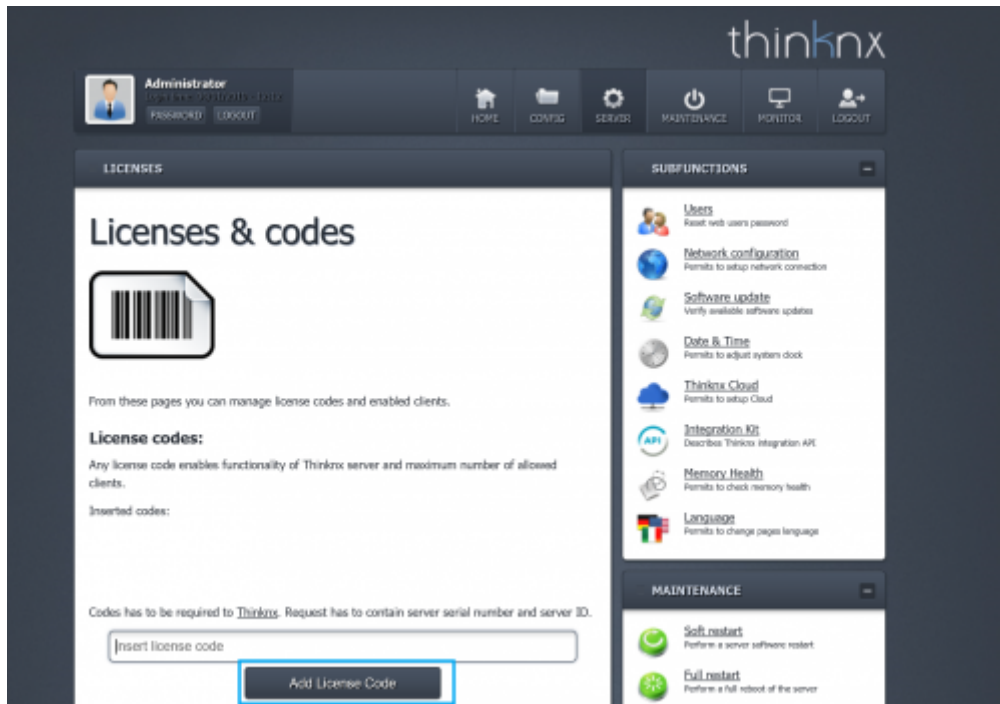

Step 6: Adding the Code

- **Step 7** To make sure the license is activated, go to Server -> Status.

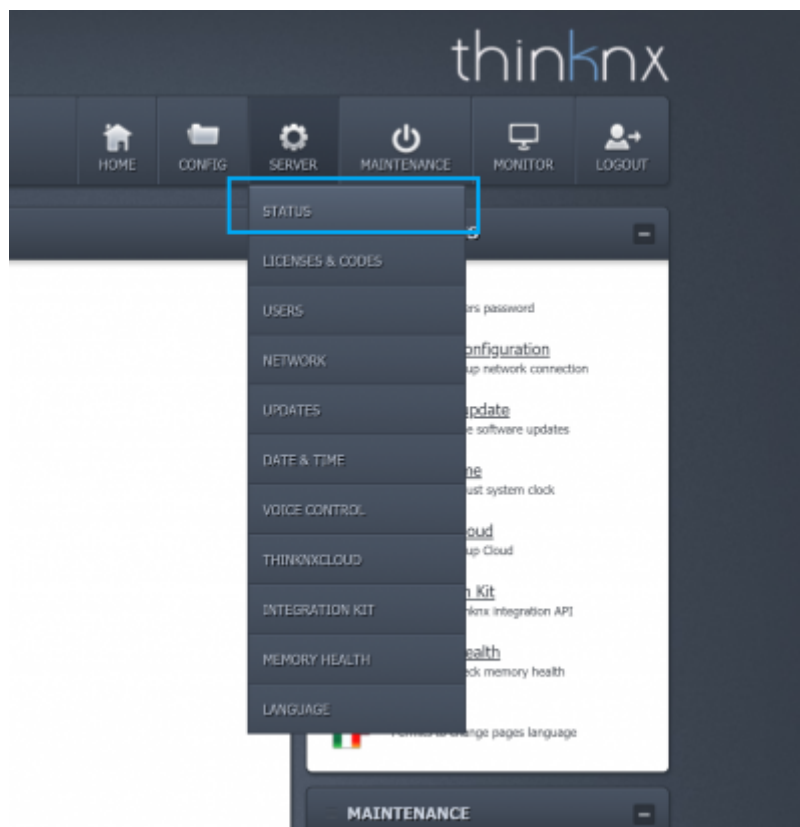

Step 7: Status Page

- **Step 8** Check under “Enabled Licenses” if your newly added license is now activated.

- Enabled licenses:
 - KNX**
 - Security appliances**
 - Intercom**
 - Modbus Gateway**
 - Reports & Charts Engine**
 - Infrared Gateway**
 - Automation**
 - Multimedia**
 - Sonos Manager**
 - Serial Gateway**
 - Ethernet Gateway**
 - Lutron Gateway**
 - Sip PBX**
 - Hue Gateway**
 - BTicino MYHome Gateway**
 - Z-Wave Gateway**
 - Voice Control**
 - Integration Kit API**

Step 8: Enabled Licenses

From:
<http://www.thinknx.com/wiki/> - **Learning Thinknx**

Permanent link:
<http://www.thinknx.com/wiki/doku.php?id=licensing>

Last update: **2019/04/01 13:36**

