


Stairwell Lighting Switch



The Stairwell Lighting Switch node, when the **Input** connector value is 1, sends 1 to the **Output** connector and then starts a timer, at the expiration of the timer it sends 0 to the **Output** connector. The timer is set to the time defined in the **Time for ON** property of the node and if the property **Retriggerable** is enabled, the timer restarts whenever the **Input** connector receives 1.

If the property **Manual OFF** is enabled, when the **Input** connector value goes to 0 the node sends 0 to the **Output** connector and automatically stops the timer; otherwise the expiration of the timer is the only condition to send 0 to the **Output** connector.

The **Warning** connector value goes to 1 before the timer expires until the **Output** connector is 1. The time for warning is specified through the **Warning before OFF** property.

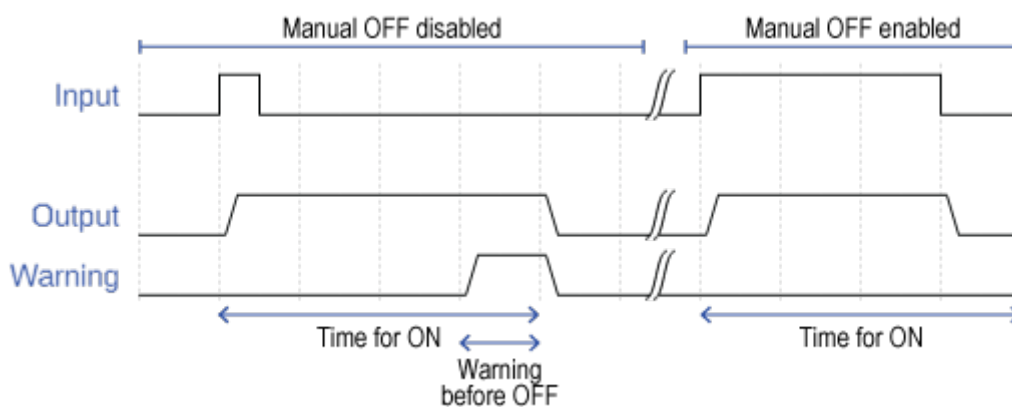

Behaviour of Stairwell Lighting Switch

From:

<http://www.thinknx.com/wiki/> - Learning Thinknx

Permanent link:

http://www.thinknx.com/wiki/doku.php?id=lm_timer_stairwell&rev=1506672683

Last update: 2019/03/20 17:03

