

# Migration to Thinknx UP

- [Introduction](#)
- [What's new?](#)
  - [General updates](#)
  - [Objects upgrades](#)
- 3. [How to migrate?](#)

## Introduction

Thinknx UP is a completely redesigned version of the Classic Thinknx software. It includes additional features for the system integrator and the end user. In order to use Thinknx UP, it is important to update both Thinknx Server and Thinknx Client as seen in the table below:

| Client<br>Server           | Classic | UP |
|----------------------------|---------|----|
| Classic (version 1.1.9.xx) | ok      | X  |
| UP (version 1.1.10.xx)     | ok      | ok |

Figure 1: Thinknx Compatibility



Push notifications only work when both server and clients are using the same Thinknx version. Other features can work even if the server is using Thinknx UP and the clients are using the Classic version.

## • What's New?

### General updates

**Improved performance of the application (in terms of speed and startup) and unified platform for a more consistent experience on all devices**



Figure 2: Thinknx Platform

### Re-designed interface of the “Project Configuration Wizard”

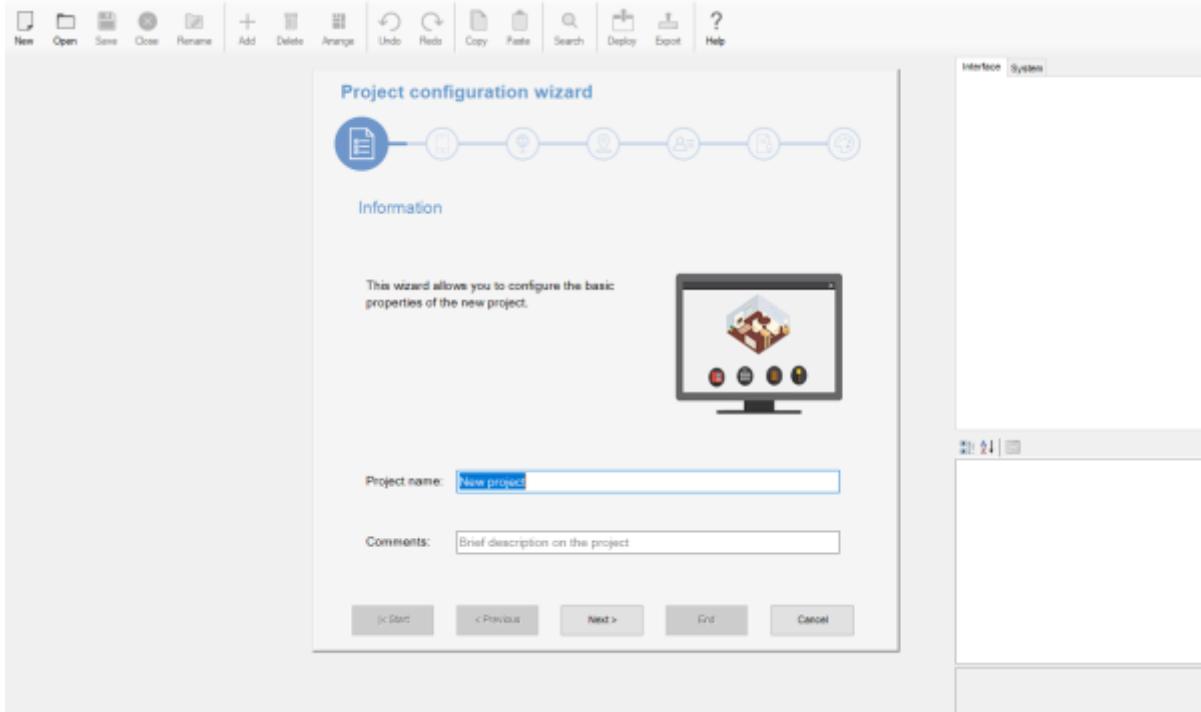


Figure 3: Project Configuration Wizard

### High customization of the icons

A large set of SVG icons is now integrated inside the Configurator, allowing the user to:

- Scale without losing quality
- Choose the background's opacity
- Change the background's color and shape
- Modify the background's border color and thickness

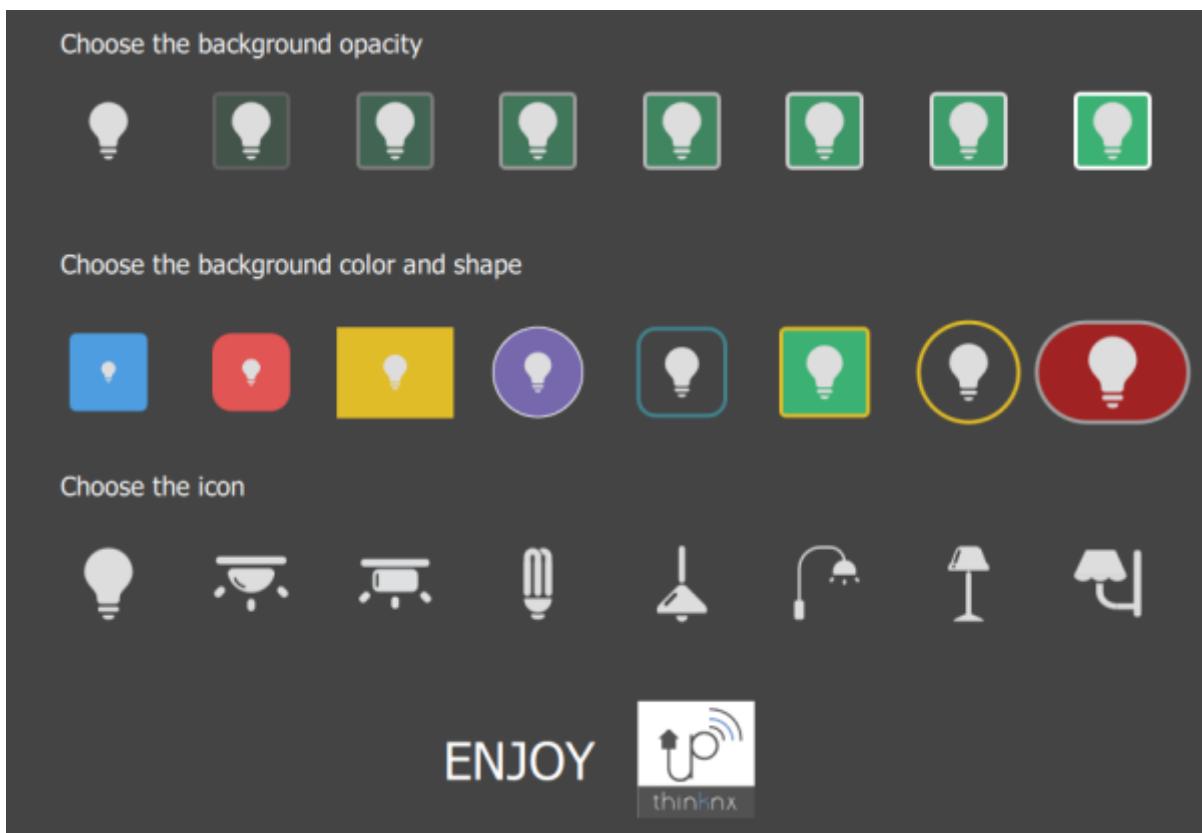


Figure 4: Graphic customization

#### Possibility to change the below for each project:

- Aspect ratio (4:3 - 16:9 - Envision - Balanced)
- Orientation (landscape - portrait)
- Theme (dark - White)

It is important to note that phones, tablets, and Envisions have different screen sizes and resolutions, therefore the project will not be displayed exactly the same on all these devices. For example, if an aspect ratio of 4:3 has been used while creating the project, and if viewed on a 16:9 device, additional spaces shall be inserted to the left and right of the project to accustom for the bigger screen.

Therefore, it is better that the integrator chooses the most favorable aspect ratio depending on the devices used in each project. If multiple types are used, then the best option would be to select the Balanced option.

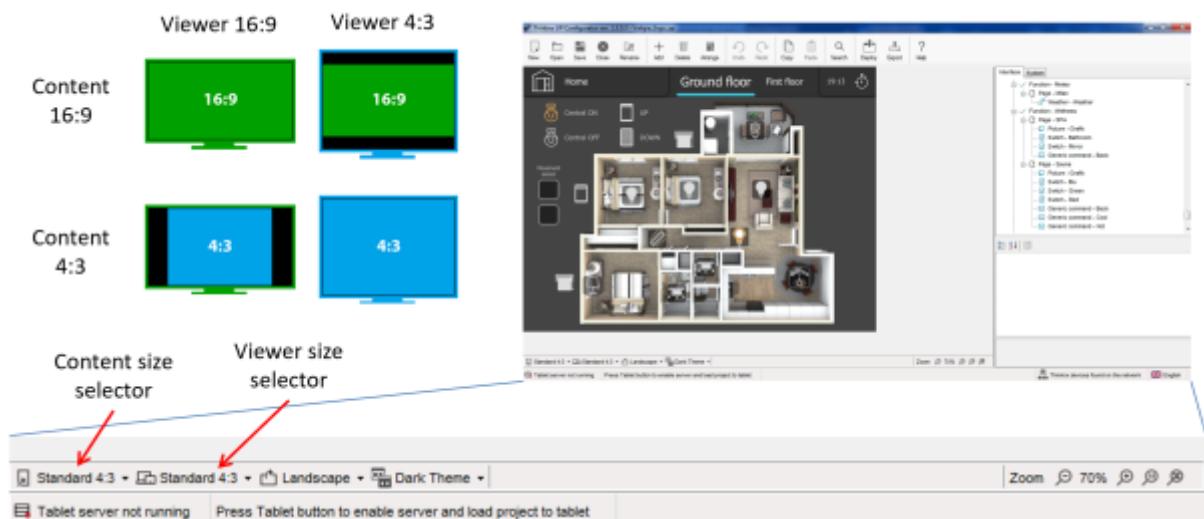


Figure 5: Aspect Ratio

### Ability to edit multiple selections at once

By selecting multiple objects, it is now possible to edit their color, background or other common parameters in just one attempt.

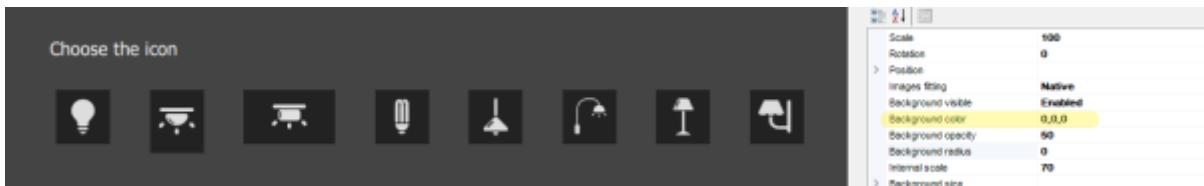


Figure 6: Edit multiple selections

### Ability to lock objects on the interface

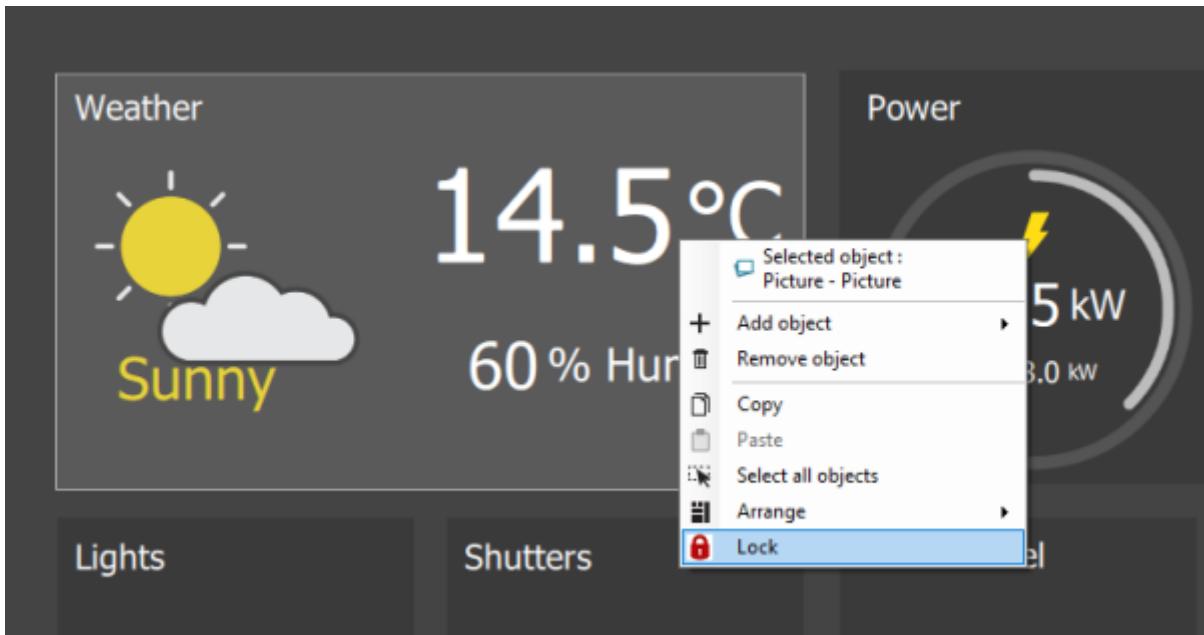


Figure 7: Lock objects

## Improved KNX group search utility

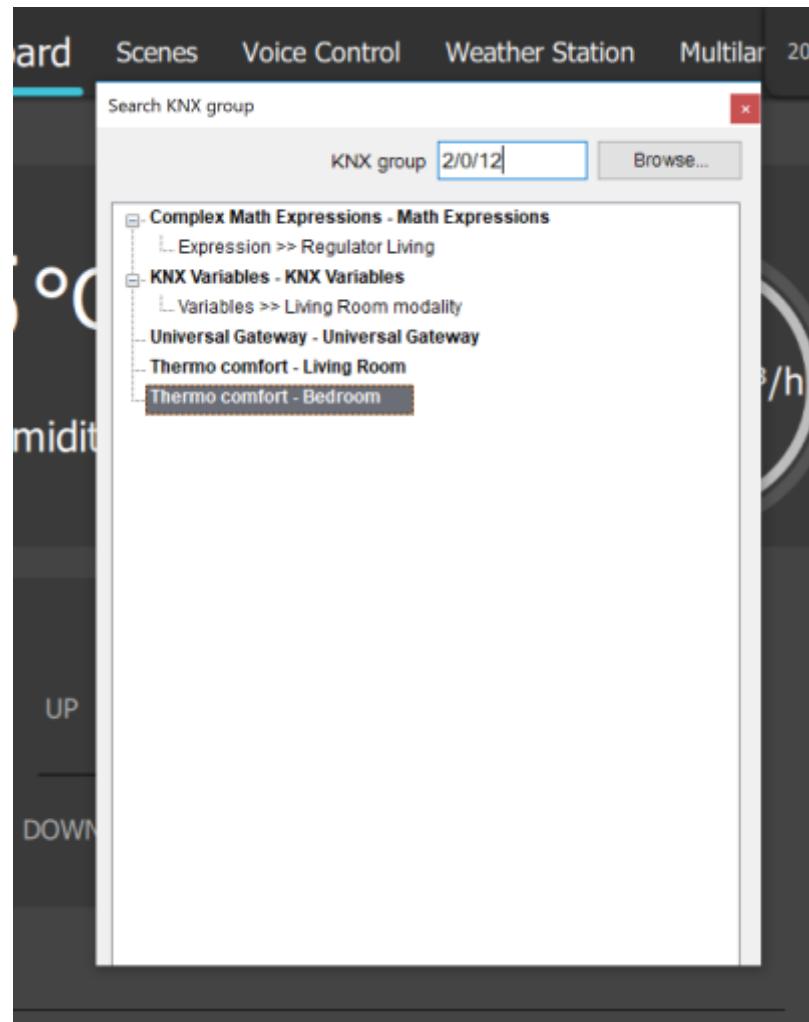


Figure 8: KNX search utility

## • Objects Upgrades

- Switch object:



- New redesigned popup window
- For Dimmer type, possibility to have a side bar to view the dimmer's feedback when popup is closed

- Shutter object:



- New redesigned popup window
- Possibility to rotate the blind from the same icon

- Scene object:



- New redesigned popup window
- Possibility to view/arrange/delete recorded actions
- Possibility add "pause" time between actions

- RGB object:



- New redesigned popup window
- Possibility to control "White" channel
- Possibility to store unlimited number of favorite colors
- Possibility to manage color sequences with changeable time interval between colors

- Thermo Comfort object:



- New redesigned popup window
- Possibility to change the valve type between 1 bit and 1 byte
- Possibility to control the fan speed
- Possibility to parameterize the setpoint between "Absolute" and "Relative"

- Analog Value object:



- Possibility to change the level colors when displayed as "bar"
- Possibility to

display  
the  
values  
as a  
“circle  
” and  
chang  
e its  
color,  
border  
thickn  
ess,  
and  
start/e  
nd  
angle

◦  
C  
a  
m  
e  
r  
a  
o  
b  
j  
e  
c  
t  
:

■  
P  
o  
s  
s  
i  
b  
i  
l  
i  
t  
y  
t  
o  
t  
e  
s  
t  
t  
h

e  
c  
a  
m  
e  
r  
a  
i  
n  
s  
i  
d  
e  
t  
h  
e  
C  
o  
n  
fi  
g  
u  
r  
a  
t  
o  
r  
e  
i  
t  
h  
e  
r  
i  
n  
“  
L  
o  
c  
a  
l  
”  
o  
r  
“  
R  
e  
m  
o  
t  
e

"  
m  
o  
d  
e  
■ N  
e  
w  
d  
e  
c  
o  
d  
e  
r  
w  
i  
t  
h  
b  
e  
t  
t  
e  
r  
p  
e  
r  
f  
o  
r  
m  
a  
n  
c  
e  
f  
o  
r  
H  
.2  
6  
4  
a  
n  
d  
H  
.

2  
6  
5

□

o  
i  
n  
t  
e  
r  
c  
o  
m  
o  
b  
j  
e  
c  
t  
:

■  
P  
o  
s  
s  
i  
b  
i  
l  
i  
t  
y  
t  
o  
m  
a  
k  
e  
i  
n  
t  
e  
r  
n  
a  
I  
S  
I  
P  
c

a  
l  
i  
s  
b  
e  
t  
w  
e  
e  
n  
r  
e  
g  
i  
s  
t  
e  
r  
e  
d  
u  
s  
e  
r  
s



o  
A  
d  
v  
a  
n  
c  
e  
d  
l  
i  
n  
t  
e  
g  
r  
a  
t  
i  
o  
n

:  
■ P  
u  
b  
l  
i  
c  
A  
P  
I  
f  
o  
r  
i  
n  
t  
e  
g  
r  
a  
t  
i  
o  
n  
w  
i  
t  
h  
i  
r  
d  
p  
a  
r  
t  
y  
s  
y  
s  
t  
e  
m  
s  
■ A  
d  
d  
i

t  
i  
o  
n  
a  
l  
s  
y  
s  
t  
e  
m  
o  
b  
j  
e  
c  
t  
f  
o  
r  
i  
n  
t  
e  
g  
r  
a  
t  
i  
o  
n  
w  
i  
t  
h  
I  
F  
T  
T  
(  
s  
e  
e  
d  
e  
t  
a  
i

|  
s  
h  
e  
r  
e  
)

## How to Migrate?

- Step 1.  
Download Thinknx UP Configurator or [here](#).
- Step 2.  
Click on Open -> Import and select your project file (.erg)

Exported projects from the Classic Configurator have the extension ".erg", while Thinknx UP projects are defined by the ".tup" extension.

- Step 3.  
Once the

project is open, arrange and modify the interface as needed.

After importing an “.erg” project, always double check that all objects inside the project have been imported correctly.

- Step 4. Click on the bottom right of the Configuration to search for your Thinknx server.  
◦ Step 5. Once

server  
is  
locate  
d,  
click  
on  
“Firm  
ware  
updat  
e” to  
open  
the  
updat  
e  
windo  
w.

A simple  
update of  
the server  
from its  
web  
interface is  
not enough  
to migrate  
to Thinknx  
UP. It will  
only search  
for the  
updated  
version of  
the Classic  
Thinknx  
(1.1.9.xx).

- Step  
6.  
Click  
on  
“Chec  
k for  
Updat  
e” to  
searc  
h for  
an  
availa  
ble  
updat

e  
online  
, or  
locate  
a file  
locally  
on the  
PC.

- Step  
7.

Once  
Think  
nx UP  
versio  
n is  
locate  
d  
(1.1.1  
0.xx)  
on the  
intern  
et,  
click  
on  
“Dow  
nload  
intern  
et  
availa  
ble  
versio  
n”.

The  
versio  
n will  
now  
be  
availa  
ble  
locally  
on the  
comp  
uter.



Figu

re 9:  
Dow  
nloa  
d  
upda  
te

- Step 8.  
Close the firmw are updat er and open it again.
- Step 9.  
Make sure that you read “1.1.1 0.xx” next to the “Local ly availa ble” status .
- Step 10.  
Click on “Upda te locally availa ble” to migra te the server

to  
Think  
nx UP.  
Once  
finish  
ed,  
the  
logs  
will  
indica  
te  
that  
server  
is now  
updat  
ed to  
versio  
n  
1.1.10  
.xx.



Figure 10:  
Install  
II  
update

- Step 11. Upload project to the updated server
- Step 12. Download Think

nx UP  
client:

- A  
p  
p  
l  
e  
-
- D  
o  
w  
n  
l  
o  
a  
d  
A  
p  
p

- A  
n  
d  
r  
o  
i  
d  
-
- D  
o  
w  
n  
l  
o  
a  
d  
A  
p  
p

- W  
i  
n  
d  
o  
w  
s  
-
- D

o  
w  
n  
l  
o  
a  
d  
P  
l  
a  
y  
e  
r

■  
M  
a  
c  
-  
D  
o  
w  
n  
l  
o  
a  
d  
P  
l  
a  
y  
e  
r

3. Step
13. If  
Envisi  
on  
scree  
n is  
used,  
go to  
“Setti  
ngs”,  
select  
the  
“Opti  
ons”  
tab  
and  
click  
on the  
butto

n  
"Load  
Think  
nx  
UP".

4. Step
- 14.
- Make
- sure
- Envisi
- on is
- updat
- ed to
- the
- latest
- firmw
- are.

Migration from Classic to UP might require a reboot of the Envision

o  
S  
t  
e  
p  
1  
5  
.E  
n  
j  
o  
y  
T  
h  
i

n  
k  
n  
x  
U  
P  
!

