

Ramp

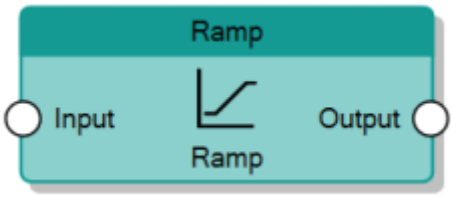

The Ramp node increases or decreases in a linear way the value of the **Output** connector until it reaches the value of the **Input** connector. The linear increment consists of adding (or subtracting) to the **Output** a value represented by the **Step size** property every time interval specified by the **Time step** property.
The value of the **Output** can't go beyond the **Input** value, so the nodes reduces the step to adapt the output to the input.

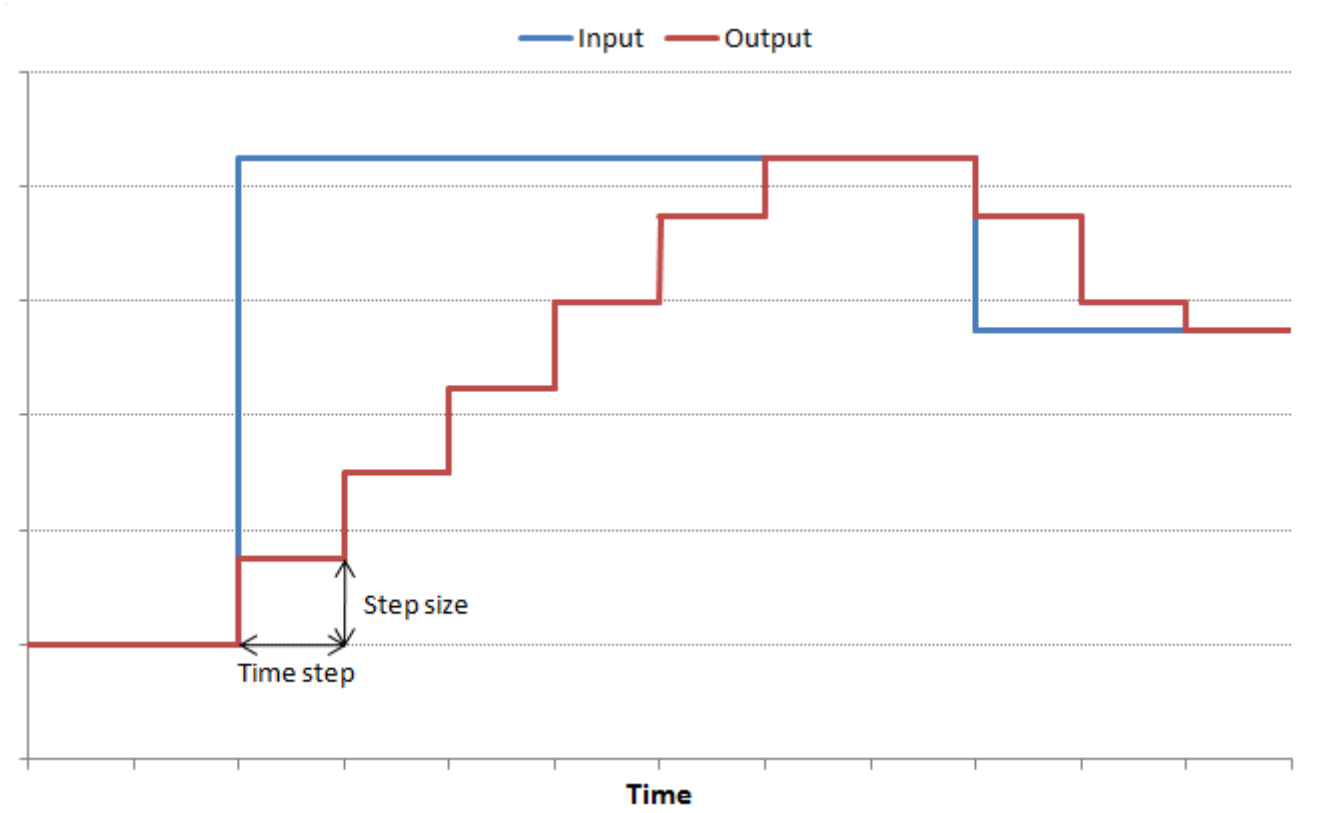

From:
http://www.thinknx.com/wiki/ - **Learning Thinknx**

Permanent link:
http://www.thinknx.com/wiki/doku.php?id=lm_analog_ramp&rev=1506606602

Last update: **2019/03/20 17:03**