

Thinknx Quick Guide

Step 1. Downloading The Software

Step 2. Choosing The Right Thinknx Server

Step 3. Setting Up The Server

Step 4. Creating The First Project

Step 5. Deploying The Project

Step 6. Authenticating Clients

Step 1. Downloading The Software



Figure 1.1: Thinknx Configurator

ThinKnx UP Configurator software is the indispensable tool for the creation and development of a supervision project. It is a complete solution to designing attractive graphical user interfaces, determining clients behavior and configuring functions and services. The software can be downloaded [here](#).

System requirements for Thinknx UP Configurator:

- Microsoft Windows 7 or above
- 64-bit system
- Updated graphic card driver supporting DirectX 10

For project visualization, Thinknx UP Client is also available for download:

- Apple - [Download App](#)
- Android - [Download App](#)
- Windows - [Download Player](#)
- Mac - [Download Player](#)



ThinKnx Player for Mac is an Air application, thus to be installed on Mac computers it requires Adobe Air software installed. Adobe Air software can be found at <https://get.adobe.com/air/>.

Step 2. Choosing The Right Thinknx Server

Thinknx provides different types of product:

- **Thinknx Server**
 - Micro / Micro Zwave
 - Compact
 - Rack
 - Envision Touch Screen / Envision Touch Screen with Zwave
 - Brickbox

2. **Thinknx Client**

- Envision Client Touch Screen







3. **Thinknx Multiroom Audio System**

- Audiofy P1
- Audiofy P4



Figure 2.1: Thinknx Servers

Choosing the suitable server for any project is directly linked to the type of system that needs to be integrated with Thinknx (For example, a Micro Server cannot be used for an integration with Zwave systems).Therefore, it is always recommended to consult the licensing table below prior making any Thinknx purchase.

	 Micro	 Micro ZWave	 Compact	 Rack	 Envision	 Envision ZWave
UNLIMITED CLIENTS	●	●	●	●	●	●
IR TRANSMITTER	●	●	●	●	●	●
REPORT UNTIL 200s	●	●	●	●	●	●
LIGHT WEB PAGE	●	●	●	●	●	●
Z-WAVE TRANSCEIVER	—	●	○	○	—	●
AUDIO/VIDEO	—	—	●	●	—	—
SECURITY	—	—	○	○	—	—
DOORCOM AND PBX	○	○	○	●	○	○
EXTENDED REPORT	○	○	○	○	○	○
AUTOMATION	—	—	○	●	—	—
LUTRON	—	—	○	○	—	—
PHILIPS HUE	○	○	○	○	○	○
STICIND MYHOME	○	○	○	○	○	○
SONOS	○	○	○	●	○	○
FULL WEB PAGE	—	—	○	○	—	—
VOICE CONTROL	●	●	●	●	●	●
ETHERNET GATEWAY LICENSE	●	●	●	●	●	●

● included feature

○ optional feature

— feature not available

www.thinknx.com

Figure 2.2: Thinknx Servers Licensing

Table

Step 3. Setting Up The Server

Step 3.1. Connect Server to Network and Power

For an easy setup, connect the server to a network that has DHCP enabled. Connect the server to the power, making sure to respect the correct voltage needed for each server type.

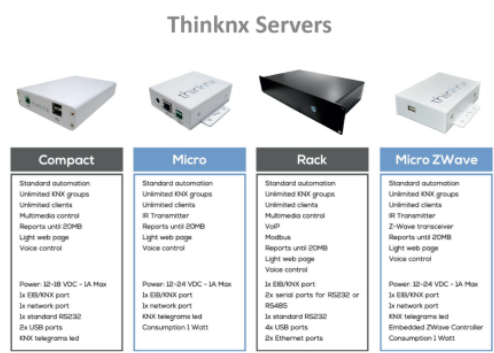


Figure 3.1: Thinknx Servers

Step 3.2. Scan for Available Servers

Once server is powered up, connect PC to the same network and access the scanning tool directly from Configurator. This tool will show all the Thinknx servers detected on the LAN and their corresponding IP addresses.



Always make sure that no firewall or antivirus are preventing the Configurator from scanning the network.

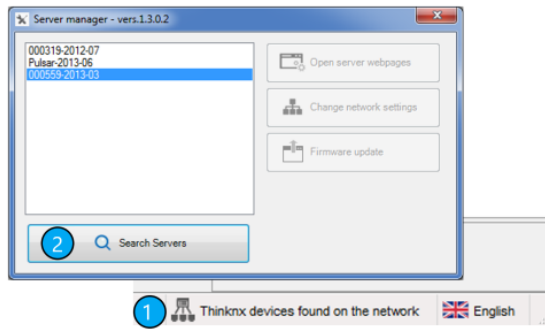


Figure 3.2: Server Scanning

Step 3.3. Access Web Interface

Access to web interface can be done by clicking on the “Open Server Webpages” in the scanner tool, or by inputting the following path into the web browser:

[http://\[server_IP_address\]:5051](http://[server_IP_address]:5051)

At the login page, the following credentials must be used: **username=service** , **password=password** . It will then be requested to change the password for the next access.

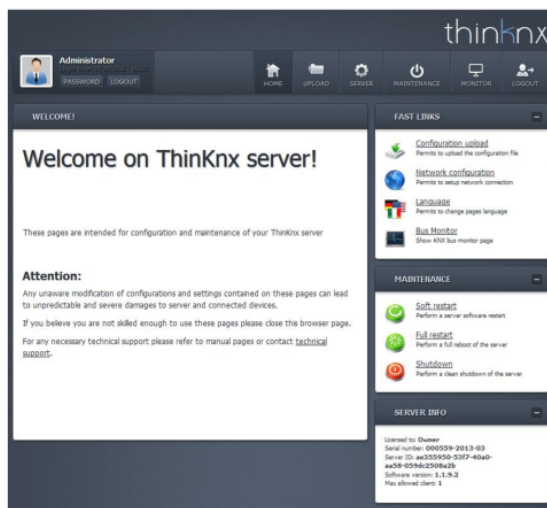


Figure 3.3: Thinknx Web Interface

Step 3.4. Update Firmware to Latest Version

If the server is already connected to the Internet, it is always advised to update the firmware to the latest version in order to avoid system bugs.

To do that, go to the “Server” Tab, select “Updates” from the list, and click on the

button “Verify for updates”. If a newer version is found, click to download and install. Once finished, the server will reboot automatically.

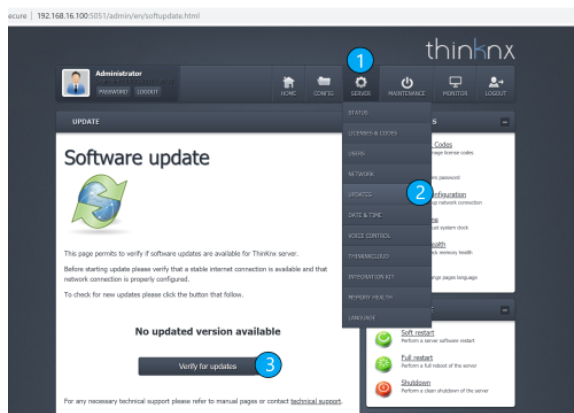


Figure 3.4: Server Update

Step 3.5. Fix Date and Time

Having the correct date and time configured in the server is crucial in order not to mess the switching schedules programmed in the Thinknx application. To change Date and Time, go to “Server” tab, select “Date and Time” from the list, choose the right time zone, and click on “Save Changes”. Wait for the “Operation Completed” message before going to the next step.

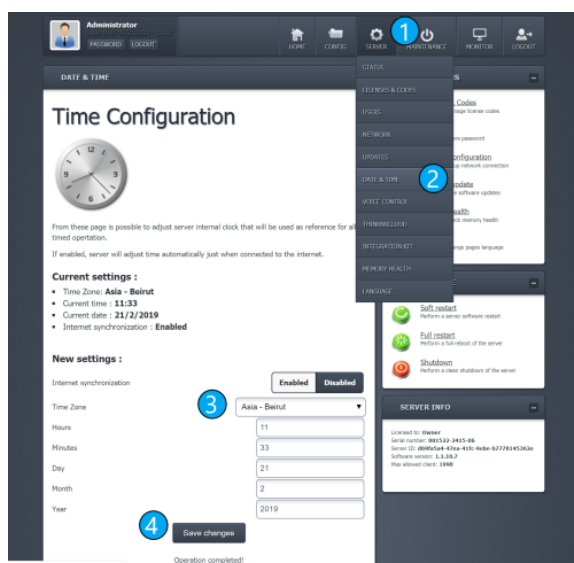


Figure 3.5: Date and Time Configuration

Step 3.6. Configure IP Address

All Thinknx Servers are, by default, configured to use DHCP if the network will allow it. In the absence of a DHCP service, it will acquire the following default IP address: 192.168.0.200.

However, it is advised to always switch from DHCP to a fixed IP address which will allow the user to know the server IP address at any moment disregarding the settings of the network it is connected to. To enter a fixed IP address into the server, click on the "Server" tab, select "Network" from the list, disable "DHCP" option, enter the IP address manually along with the subnet mask, default gateway and DNS server, and click on "Save Changes".

To access the server's web interface again, enter the new fixed IP address in the following path:

http://new_ip_address:5051.



Whenever a fixed IP is used, the network interface of the server will be configured in such a way so that it will always be reachable at the IP address 192.168.24.254/30.

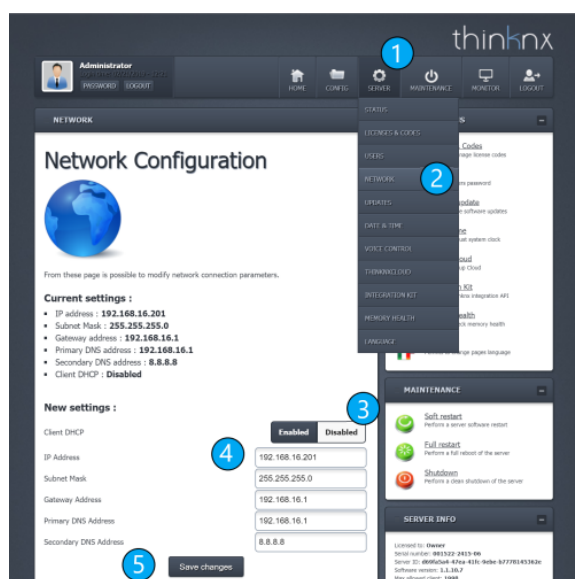


Figure 3.6: IP Address Configuration

• Step 4. Creating The First Project

Projects can be created using a dedicated wizard tool, which will be automatically launched by clicking on the “New” button. The data required by the wizard tool is:

- Project name
- Server type and serial number
- Server IP address
- Geo-localization coordinates (optional)
- List of users (optional)
- Licenses (optional)

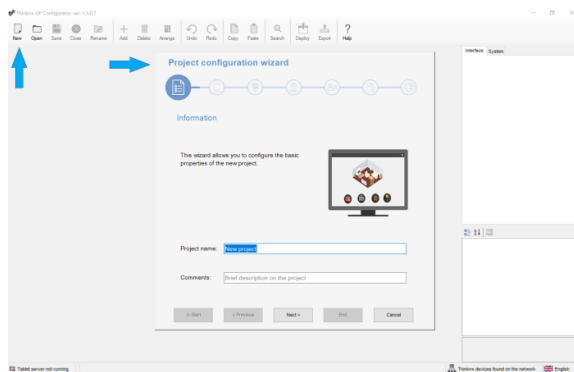


Figure 4.1: New Project Wizard

If the data is unknown when creating a new project, clicking END after naming the project will close the wizard and create the project. The missing data can be entered later by going to the System tab, and clicking on System in the list, as seen in the below picture.

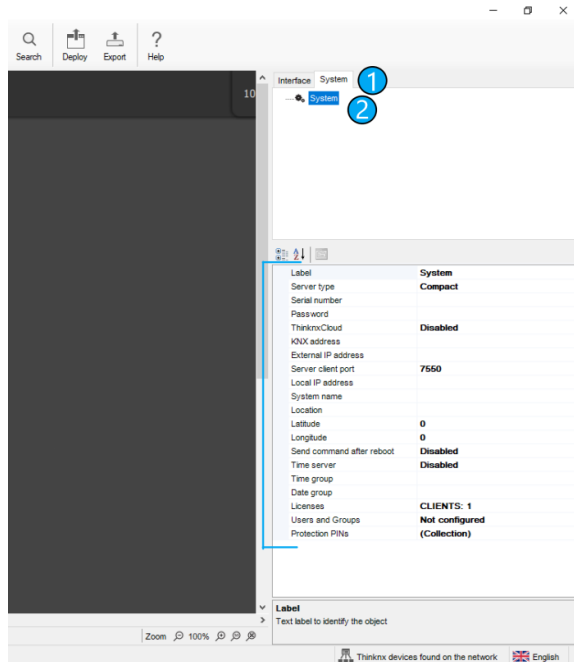


Figure 4.2: Project System Information

For more information regarding the Project Creation Wizard, check out our [Project Creation](#) page.

Once the project is created, it is now possible to start designing the interface. The integrator will be able to do the following:

- Enabling/Disabling **functions** (located in a menu to the left)
- Creating new **pages** under each function
- Adding different **interface elements** for each page (buttons, pictures, indicators, etc). For more information regarding each interface object, check out our [Interface Objects](#) page.
- Creating **system objects** to be linked to their corresponding elements in the interface (HVAC controller, RGB controller, etc). For more information regarding each System object, check out our [System Objects](#) page.

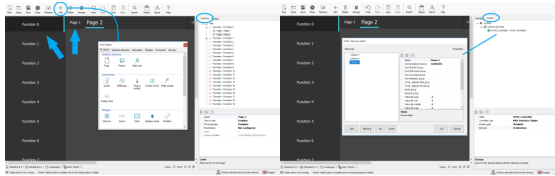


Figure 4.3: Designing User Interface

Figure 4.4: Creating System Objects



It is always recommended to save the project inside the Configurator, and to create a backup of the file by clicking on Export → Export Project.




Figure 4.5: Saving and Exporting Project

• Step 5. Deploying The Project

A Thinknx project can be defined as a folder containing all the configuration files and all the settings related to a specific plant. All files imported in the project (such as ETS, images, etc.) are copied and stored in the project folder.

More information can be found on our [Project Deployment](#) page.

When a project's configuration is finished or has been modified, it needs to be deployed to the server and client, using one of these following methods:

- [Method 1: Using the local network](#)
- [Method 2: Using Thinknx cloud](#)



Deploying the project should be done to Thinknx server AND client together, after each modification. If the project version on the server does not match the version on the client, the application will not work correctly.

Method 1: Using the local network

This method should be used when the Thinknx server is connected to a local network but has no access to the Internet. However, it requires the use of a PC with the Thinknx Configurator installed as well as the availability of all the client devices on site. The PC and the clients should be connected to the same network as the Thinknx server.

- **Step 1.1: Deploying the project to the server**
 - After saving the project inside the Configurator, click on

“Deploy”, and select “Upload to local server”. After the upload is completed, the server will reboot.

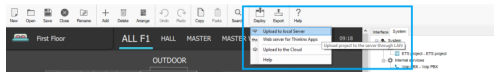


Figure 5.1.1: Deploying to Local Server

- **Step 1.2: Deploying the project to the client**
 - After deploying the project to the local server, you will automatically be asked if you wish to do the same for the client. If the automatic request does not show, you can click on “Deploy” and select “Web server for Thinknx apps”. In case some users have been created inside the Configurator, select the user corresponding to the client device. A message at the bottom of the Configurator will show stating that:
“Tablet server is running. App created for user “[username]”.
Write
[PC_IP_address]:5050 to the settings on iPad or Android application”.
 - On the client device, Go to “Settings”, select the tab with a PC icon related to the Configurator, write down in the Configurator URL the IP_address:5050 mentioned in the previous step and click “Download”. The project will be downloaded to the client's device and

the progress will show
on the Configurator.


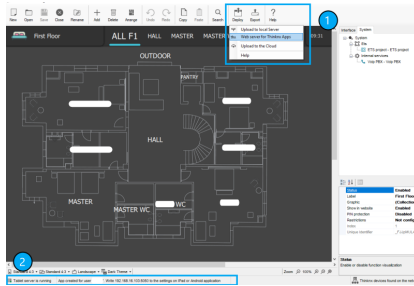


Figure 5.1.2.1: Deploying to
Local Client

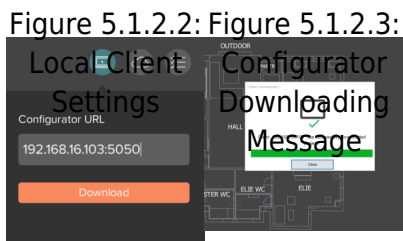

Method 2: Using Thinknx Cloud


This method is more popular than the previous one because it allows to deploy the project to the server and clients even remotely. The main condition to achieve this is to have the Thinknx server connected to the Internet.

◦ Step 1: Enabling Thinknx Cloud on the server

In the web interface of the Thinknx server, click on "Server" tab, select "Thinknx Cloud" from the list, and click on "Enable Thinknx Cloud". Fill in the new password and email address and click "Enable". The Cloud service should now

be enabled, and the connection should be “available and established” as seen in the picture below.

Figure 5.2.1.1: Enabling Cloud on server
Figure 5.2.1.2: ThinknxCloud Configuration status

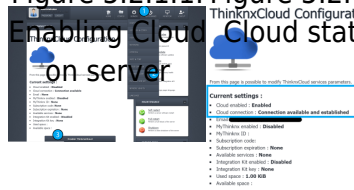

◦ **Step 2: Configuring Cloud inside the Configurator**

Open project inside Thinknx Configurator and enable Thinknx Cloud in the “System” tab. Make sure to enter the same password used in the web page.

It is also important to enable **“Automatic Server update”** allowing the server to be updated automatically with every project upload to the Cloud.

Enabling **“Automatic Authentication”** will allow new users to access the mobile application without the need for an intervention on site (see section [Client Authentication](#) below).

Finally, selecting “Local and Cloud” for the **“Cloud Connection Policy”**, will allow the client to connect to the server using Thinknx Cloud whenever the local connection fails.

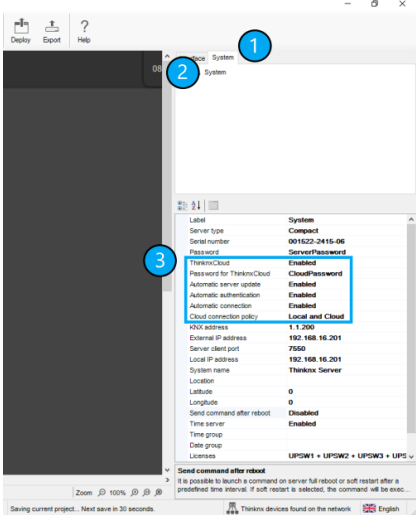


Figure 5.2.2.1: Configuring Cloud inside Configurator

◦ **Step 3: Uploading the file to the Cloud**

Inside Thinknx Configurator, click on “Deploy” and select “Upload to the Cloud”. Allow 1-2 min after upload for the server to reboot.

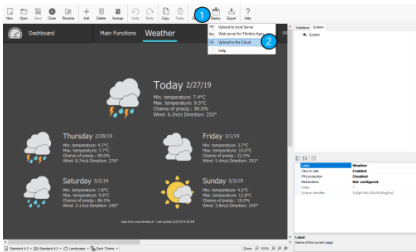



Figure 5.2.3.1: Upload to Cloud

◦ **Step 4: Downloading the project onto the client device**

Open Thinknx application and go to Settings. Select the Cloud icon, and enter the serial number of the server and its corresponding password (Cloud password).



If users have been created

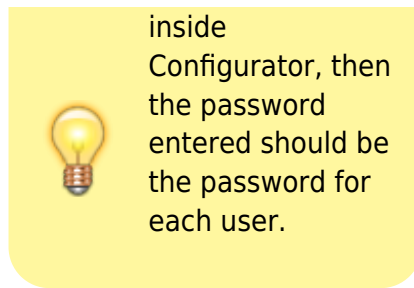


Figure 5.2.4.1: Downloading project from Cloud


◦ **Step 6. Authenticating Clients**

Whenever the client uses the Thinknx application, a connection to the server is established. The first time the client opens the loaded project, the server requests an authentication of the device.

▪ **Authentication via local network:**

This method only works if there is direct access to the server's web page.


- **The Client**
Authentication is done on the server's web page, under Server → Licenses & Codes.
- Copy the last connected client code and paste it in the field under the table.
- Click on "Add client code" and check the "Enabled" box.

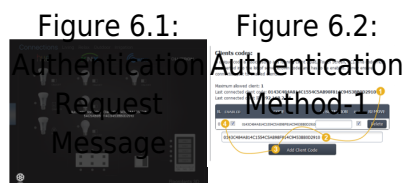

▪ **Authentication via Cloud**

The authentication can be done remotely without the need to access the server's web page. It only requires the creation of the users inside the Configurator project. The username and password of each user shall be used to allow access to the project. Another requirement is to

have «Thinknx Cloud» enabled, as well as «Automatic Authentication» inside Configurator.

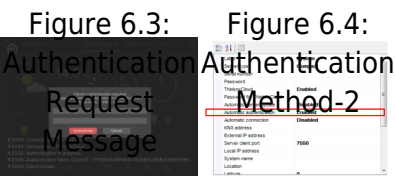

From:
<http://www.thinknx.com/wiki/> - Learning Thinknx

Permanent link:
<http://www.thinknx.com/wiki/doku.php?id=quickguide&rev=1571297722>

Last update: 2019/10/17 09:35

